

# MODEL FPT 300 AND MODEL FPTW 300 (WATERLESS PORTABLE TOILET)

PATENTS ISSUED AND PENDING

Licensed for Manufacture and Marketing to [PortableRestrooms.com](http://PortableRestrooms.com)

Models FPT 300 and FPTW 300 are patented folding portable toilets that ship fully assembled in a folded position. These Porta john® portable toilets can be deployed in 3 minutes or less.

**Model FPT 300 Folding Portable Toilet Definition:** *The Model FPT 300 assumes you have an external water source to charge the holding tank and do the necessary disinfecting and cleaning.*

**Model FPT 300 Contains one pint of starter portable toilet deodorizer and two rolls of toilet tissue.**

**Model FPTW 300 Waterless Folding Portable Toilet Definition:** *These units do not require any outside water source and ship completely assembled, ready to use with a full complement of consumables and hand washing supplies during any emergency*

## Waterless Kit Includes the Following

Contents 1 – FPTW 300 Waterless Folding Portable Toilet

(See Assembly Instructions on Pgs. 5 & 6)

- 1 – 5 Gal Pail EMJ5GCH Toilet Deodorizer (see Instructions on Pg. 8)
- 1 – Hand Sanitizer w/Mounting Brackets and Velcro (Pg. 4)
- 2 – Gel Refill Cartridges (One Inside Hand Sanitizer)
- 4 – Pair Latex Gloves (in Plastic Bag)
- 4 - Rolls Toilet Tissue (in Plastic Bag)
- 1 – Spray Bottle (Odor Eliminator)
- 1 - Spray Bottle (Disinfectant Cleaner)
- 1 – 5 Gallon Bucket to Store Cleaning and Hand Washing Supplies

## Table of Contents

Title and Definition .....	Page 1
Contents Instructions .....	Page 2
Waterless Model FPTW 300 Pictorial of Contents .....	Page 3
Hand Sanitizer Mounting .....	Page 4
Basic Deployment Instructions .....	Pages 5 & 6
Cleaning Procedures & Explanation of Differences Between FPTW 300 and FPT 300 ...	Page 7
Illustration of the Disaster Buc-Kit Supplies in the Model FPTW 300 .....	Page 8
Instruction on the Use of the EMJ5GCH Portable Toilet Deodorizer .....	Page 9



## **Disaster Relief Kit for FPTW 300 (Waterless Model) & FPT 300**

Contents 1 – FPTW 300 Waterless Folding Portable Toilet

(See Assembly Instructions on Pgs. 4 & 5)

1 – 5 Gal Pail EMJ5GCH Toilet Deodorizer (see Instructions on Pg. 9)

1 – Hand Sanitizer w/Mounting Brackets and Velcro (Pg. 3)

2 – Gel Refill Cartridges (One Inside Hand Sanitizer)

4 – Pair Latex Gloves (in Plastic Bag)

4 - Rolls Toilet Tissue (in Plastic Bag)

1 – Spray Bottle (Odor Eliminator)


1 - Spray Bottle (Disinfectant Cleaner)

1 – 1- 5 Gallon Bucket Containing the Cleaning and Hand Washing Supplies

Instructions:

1. Remove banding and shrinkwrap from toilet and pallet.
2. Remove all FPTW 300 Kit parts from holding tanks and set aside.
3. Follow Assembly Instructions for FPTW 300 on attached instruction sheet.  
(see pages 5 & 6 for assembly instructions)
4. After the toilet is fully assembled (should take 3 minutes or less), detach the spring from the S-Hook on the wall and place two rolls of toilet tissue on the spring. Re-attach spring to wall.
5. Place pre-loaded hand sanitizer on the bracket (either inside or outside the toilet). Set aside extra refill cartridge.
6. With gloves on, pour 50% (2.5 gallons) of toilet deodorizer into holding tank (Deodorizer is Not Harmful, but Contains Blue Dye Masking Agent)
7. Toilet is now ready to use. Please note occupancy indicator on door and lock the door when in use.

**The Model FPT 300 was the Exclusive Portable Toilet Used at the 1996 Summer Olympic Games in Atlanta, Georgia.**

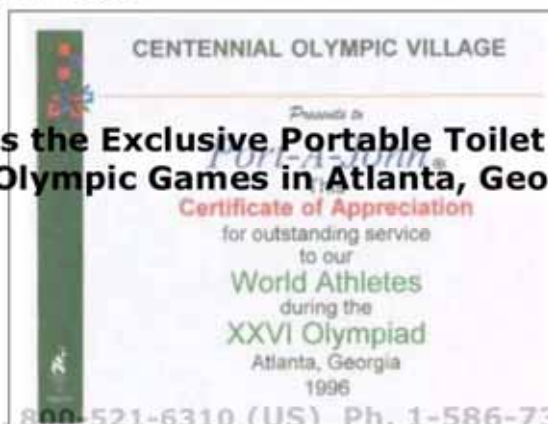



# Model FPTW 300 Waterless Portable Toilet Hand Sanitizer Illustration and Instructions



Externally Mounted  
Hand Sanitizer Dispenser



Externally Mounted  
Hand Sanitizer Dispenser Bracket



Hand Sanitizer Dispenser  
Ships with Refill Inside &  
a Second Refill in the Buc-Kit



Alcohol Based Hand  
Sanitizer Refill

# Porta John® Patented Folding Portable Toilet Assembly Instructions – Page 1

## Portable Restrooms Model FPT 300 & FPTW 300



Picture 1

Picture of Components (Urinal & Bolts Inside Tank)

Shell – Tank - Floor - Roof  
Patents Issued and Pending

Place Outer Shell on Ground




Picture 2



Picture 3

Stand Outer Shell Up and  
Square Off By Pulling on the  
Door or Corner

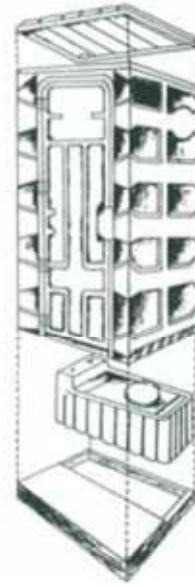

Picture 3a



Picture 3b



Picture 3c

Walk Around and Square Up  
Unit By Pulling on Corners

Insert Floor Through the Outer Shell Door



Licensed for manufacture and Marketing to [PortableRestrooms.com](http://PortableRestrooms.com)



## Porta John® Patented Folding Portable Toilet Assembly Instructions – Page 2

Patents Issued and Pending



Picture 5



Picture 5a

Place Tank Holding Tank in Unit Through Outer Shell Door

Unit Sump Will Fit Snug in the Rear Section of the Floor

Remove Urinal and Bolts from Holding Tank. Place Urinal Spout in Small Hole in the Top of the Holding Tank and Snap Into Flaps

Place Roof on the top of outer shell and fasten with a bolt and wing nut on each side.



Picture 6



Picture 6a



Picture 6b



Picture 6c

To store the unit for future deployment, reverse the entire process. Fifty (50) of the Porta John® patented portable toilets can be stored in a 20' x 8' foot container.



<http://toilets.com/products/portajohn.htm>

12 Completely Assembled Patented Folding Portable Toilets Model FPT 300 Shipped in a Folded Position.

Each FPT 300 or FPTW 300 can be deployed in three minutes.



# Consumables included with Model FPT 300



1 Pint of Porta  
John® Portable  
Toilet Deodorizer

Six Rolls of Toilet  
Paper included with  
each Model FPT 300



## Optional Waterless Consumables for Model FPTW 300

For: Disaster Relief, Long Term Storage, Fast Deployment and 48 hour Waterless Usage

Patents Issued and Pending



## Waterless Model FPTW 300 contains:

- One - 5 Gallon Premixed Toilet Deodorant – Sufficient for 2 Charges Over 48 to 72 Hours
- One **Externally or Internally** Attached (No Tools Required) Hand Sanitizer
- Two Alcohol Based, All Weather Hand Sanitizer Refills
- One Cleaning and Hand Wash Buc-kit ([see page 6 for a list of contents](#))
- Six Rolls of Standard 2-Ply Toilet Tissue & Supply of Tissues

## Usage and Cleaning Procedure

The Model FPTW 300 will accommodate 30 people for 24 hours with daily service. Service is defined as evacuating the waste tank, cleaning internal surface areas, replenishing the toilet tissue, checking the hand sanitizer dispenser and recharging with 2.5 gallons of our portable toilet deodorizer EMJ5GCH. It is best to line up your service contractor at the same time you purchase the portable toilets. The Model FPTW 300 can be serviced by either a portable toilet or septic tank servicing company. We can assist you in your efforts to procure a service contractor. Please feel free to contact me (Earl Braxton 800-521-6310) with your questions.

## Illustration of the Contents of the Disaster Buc-Kit Shipped with the Model FPTW 300 Waterless Toilet





# EMJ5GCH

Wild Cherry

**48 Hour Portable Restroom Deodorizer**  
**Not A Concentrate**

## MIXING AND USE DIRECTIONS

EMJ5GCH masks the odor in portable toilet holding tanks. Use 50%, or 2-1/2 Gallons of this solution in the portable toilet tank, leaving behind a fresh scent. NO EXTERNAL WATER SOURCE REQUIRED. Our chemical will keep a constant deep blue color. A portion of this solution can also be used to clean and deodorize the entire unit surface area.

## DISPOSAL AND STORAGE

- Dispose of in sanitary landfill or by method approved by state and local authorities. Or when water supply resumes operation rinse and reuse.

**DO NOT CONTAMINATE WATER, FEED OR FOOD**  
**ALWAYS KEEP CONTAINER CLOSED WHEN STORED**  
**MADE IN THE USA**



Porta John® Toilet  
Deodorizer 48 Hour Supply  
EMJ5GCH

## KEEP OUT OF REACH OF CHILDREN

- **CAUTION; DO NOT INGEST. PROTECT EYES AND SKIN FROM CONTACT WITH THIS CHEMICAL. USE EXTREME CARE WHEN HANDLING THIS PRODUCT – THIS PRODUCT WILL STAIN. AVOID PROLONGED OR REPEATED BREATHING OF VAPOR AS THIS MAY CAUSE ALLERGIC REACTION.**

### FIRST AID:

**For Ingestion:** Drink 1 – 2 glasses of water. Induce vomiting by sticking finger down throat or by giving soapy or salty water to drink. Repeat until vomit is clear and call a physician. Never give anything by mouth to an unconscious person.

**Eye Contact:** Immediately flush with water. Consult a physician immediately.

**For Inhalation:** Remove person to fresh air. If breathing is difficult, give oxygen. Call a physician.

**Skin Contact:** Wash with Hand Sanitizer Solution or the water form Model FPHW 4545 is utilized in conjunction with the Model FPTW 300.

## Instructions

Pour 50% or 2.5 gallons into the holding tank. Close the bucket lid and store in close proximity to the Model FPTW 300 Waterless Portable Toilet. You can use a pair of the vinyl gloves that are shipped with the Model FPTW 300.